

Lifeguard Submersible LED Pond and Fountain Light

Lifeguard LED Pond Light



Your LED Light package should include an LED Light and a Ballast.



Each Light has two (2) cables attached. The longer one is Male - which is connected to the ballast and the other is Female - Comes closed and is used to connect more LED Lights to one ballast (Max - 2 on one ballast)



The Male connector of the LED Light gets connected to the Female connector of the ballast. This connection can only be complete one way due to the shape of each connector.



Make sure to press the two connectors tight as shown above. The two sides should be pressed against the white o-ring.



Close the closing Nut all the way. No Threads should be visible



Make sure that the shorter male connector to link more lights is sealed properly if not used.



To connect additional LED lights to one ballast join the male end of the additional light to the Female end of the first light. Observe the following steps to connect additional LED Lights




STEP 1 - Take out the rubber seal from the Light connected to the Ballast. This is the shorter cable with Female Connector



STEP 2 - Take the male end of the second light and connect it to the first light



STEP 3 - Press and seal the joint as discussed earlier.

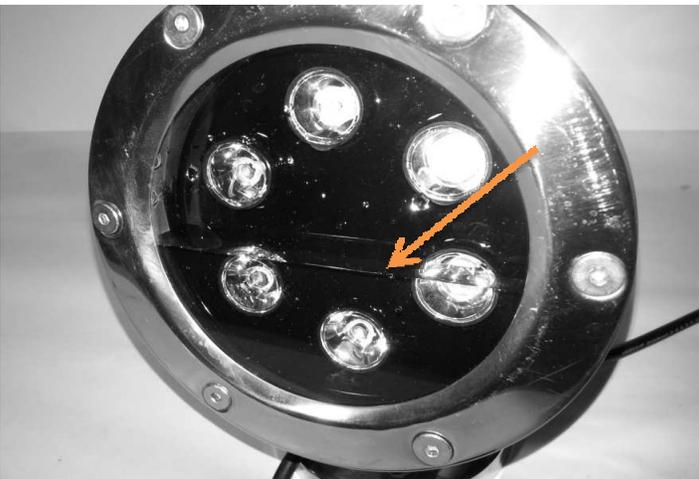

Presence of Moisture or water inside the glass is normal. The LED are sealed in resin and water or moisture will not cause any damage. Just perform maintenance periodically to get proper illumination through the LED and glass.

WARNING: DO NOT SUBMERSE THE BALLAST IN WATER.



MAINTENANCE: Using an Alan wrench take off the screws and nuts. Remove the steel top ring. Take off the rubber ring and the glass. Clean any moisture or dirt. Replace the rubber ring and the glass cover. Make sure to align the holes in the rubber ring with the screw holes. Replace the top ring and install the screws